

WIKGO Technology Ltd

【 Battery Adapter List 】

#	Model #		Fits batteries
1	ADP-SY-F550	Sony	NP-F550 / 750 / 770 / 960 / 970...
2	ADP-SY-F550A		NP-F550 / F750 / F770 / F960 / F970... NP-FM50 / SQ71D / SQ91D...
3	ADP-SY-FM50		NP-FM50 / SQ71D / SQ91D...
4	ADP-SY-FF51		NP-FF50 / 51 / FF70 / FF71
5	ADP-SY-FP50		NP-FP50 / FP70 / FP90 NP-FH50/ FH70 / FH100
6	ADP-SY-FP50A		NP-FP50 / FP70 / FP90 NP-FH50/ FH70 / FH100 NP-FT1 / FR1 / FE1 / BG1
7	ADP-SY-FA50		NP-FA50 / FA70
8	ADP-JV-107	JVC	BN-V107 / V114
9	ADP-JV-F707		BN-VF707 / VF714 / VF733
10	ADP-JV-416		BN-V408 / V416 / V428 BN-VF707 / VF714 / VF733
11	ADP-PN-D16	Panasonic	D08 / D16/ D28/ D54/ D320 DU07/ DU14/ DU21 CGR-S006
12	ADP-PN-S005		S-005 / S-007 / S-008
13	ADP-SM-L110	Samsung	SB-L07 / L110 / L220
14	ADP-SM-L160		SB-L160 / L320
15	ADP-CN-511	Canon	BP511 / BP522 / BP535... BP-208 / 216 NB1L / NB2L / NB3L
16	ADP-CN-915		BP915/BP935/BP945/BP950G/BP970G
17	ADP-CN-915A		BP915/BP935/BP945/BP950G/BP970G NB4L / NB5L
18	ADP-NK-EL3	Nikon / Minolta Olympus/Pentax	EL3 / EL3e NP-400 / DI50 BLM1
19	ADP-FJ-NP60	Fuji	NP30 / NP40 / NP60 / NP70 / NP95 / NP120
20	ADP-KD-7001	Kodak	KLIC5001 / 7001 / 7002 / 7003 / 8000
21	ADP-NK-EL8	Nikon	EN-EL5 / EN-EL8 / EL10
22	ADP-NK-EL9	Nikon	EN-EL1 / EL3 / EL3e / EL9 /
23	ADP-CS-NP50	Casio	NP-20 / NP-40 / NP-50
24	ADP-PT-D150	Pentax Fuji	D-Li63 / D-LI50 / Fuji NP150